

# Stereo Active Speaker System



**C 0927 White 130mm (5.25")**



## Overview:

These music speakers feature exceptional sound quality for professional sound reinforcement. They offer a stylish contoured profile together with a quick mounting bracket that virtually disappears once mounted. An in-built amplifier allows easy integration into existing systems with only line level signal required for operation.

Rear mounted volume, bass and treble controls allow easy adjustment, even after installation. RCA's provide easy connection to existing audio sources.

Each speaker set can be switched off when not in use.

Great for bars, cafes, function areas, pubs, boutiques etc.

**System comprises of one active speaker with inbuilt stereo amplifier and one passive speaker which is powered from the active speaker.**

## Features:

- Aluminium grill and bracket
- In-built amplifier for easy integration
- Easy to install, quick adjust bracket
- Outstanding sound reproduction
- Great for bars, cafes, pubs, boutiques etc.
- **Includes 2 x right angle RCA adaptors**

## Instructions For Use:


1. Ensure unit is switched off before making any connections.
2. Set volume control to a minimum before proceeding.
3. Connect the active speaker terminals to the passive speaker terminals using the figure 8 cable provided.
4. Connect music source RCA output to RCA input on the active speaker.
5. When all connections have been made, switch on the active speaker and your input source device.
6. Adjust the volume, bass, and treble as required.

## Specifications:

	<b>C 0927</b>
Rated power:	30W Max
SPL 1W @ 1m:	93dB
Freq response:	80Hz-20kHz
Dimensions (mm):	248H x 190W x 210D
Weight passive:	2.6kg
Weight active:	3.7kg

# CONNECTION DETAIL

AUDIO SOURCE - MP3 Player, CD/DVD, Mixer, Pre-Amp, Computer etc.

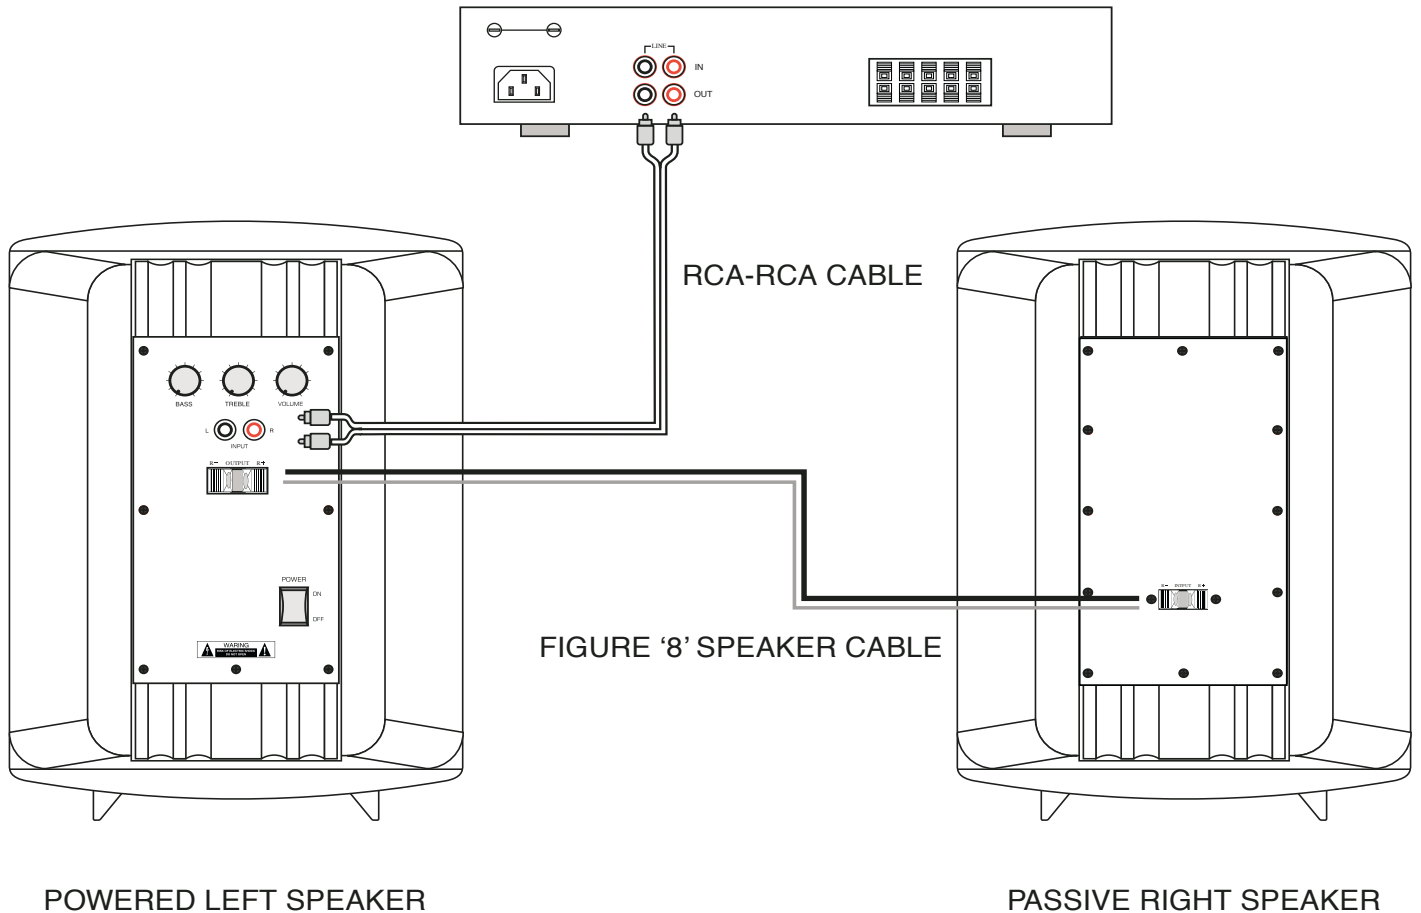

## WARNING

There are no user serviceable parts inside the unit. Do not open the unit.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

### **NOT FIELD SERVICEABLE.**

For repair return to your nearest authorised service centre.

**Altronic Distributors Pty Ltd. Perth  
W.A. 6000**

**Ph. 1300 780 999**

**Fax 1300 790 999**