


Polaroid Filters

Pair with Scale

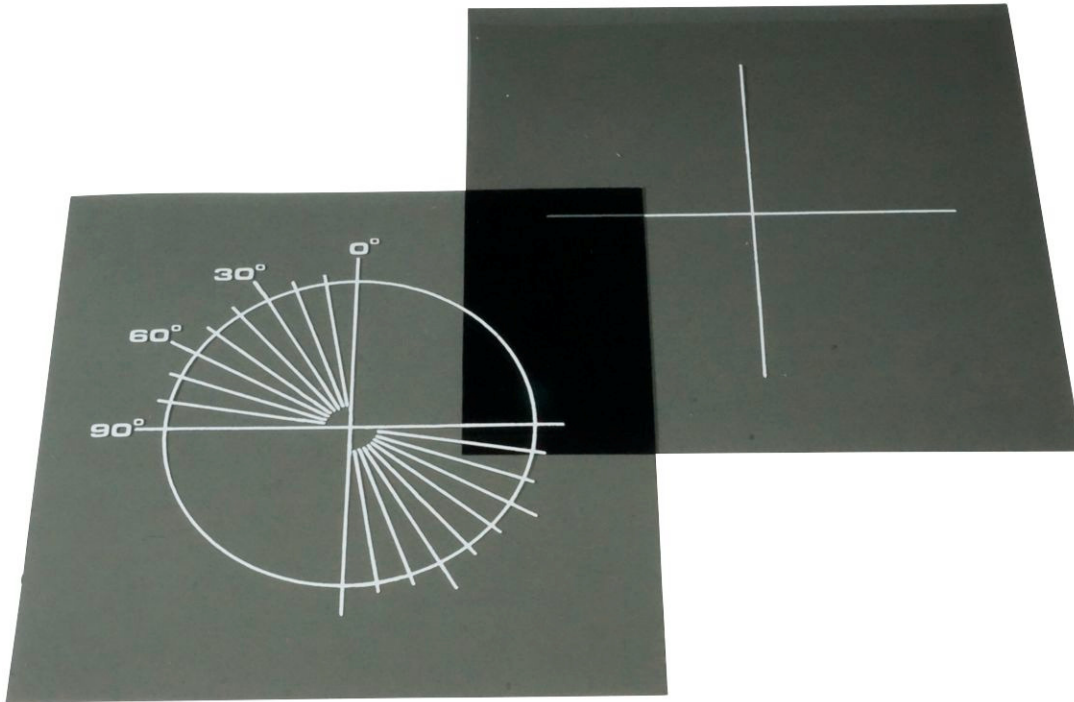

HL1883-050 100mm sq. with Circular Scale

Description:

Two 100mm square polaroid filters one printed with a circular scale and the other with 90° lines to make the angular alignment between them easier to understand.

The transmission is 38% when polaroids are aligned. When misaligned at 90°, the transmission reduces to less than 0.2% (almost complete blackout).

Length: 100mm	Width: 100mm	Thickness: 0.28mm	Weight: 6g
---------------	--------------	-------------------	------------

Designed and manufactured in Australia

INDUSTRIAL EQUIPMENT & CONTROL PTY.LTD.

61-65 McClure St. Thornbury. 3071 Melbourne. Australia

Tel: 61 (0)3 9497 2555 Email: iec@iecpl.com.au www.iecpl.com.au

1