



PA Application | A 4903A 100V Line to Low Level Adaptor


This useful adaptor receives a 100V signal from one amplifier and reduces the level down to either balanced mic level or line level to feed into the input of a second amplifier. Especially useful for expanding existing systems where additional amplifiers are being installed far away from the signal source.

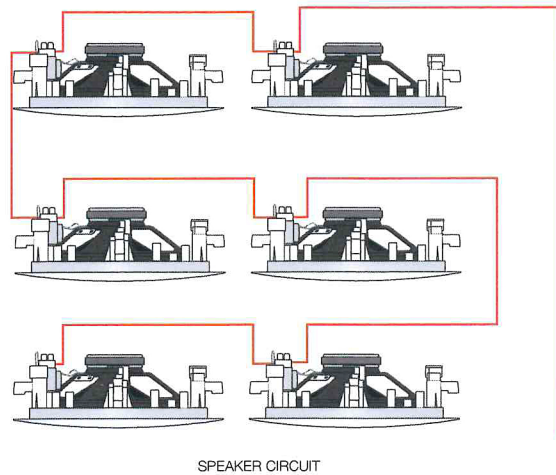


AMPLIFIER - ZONE 1

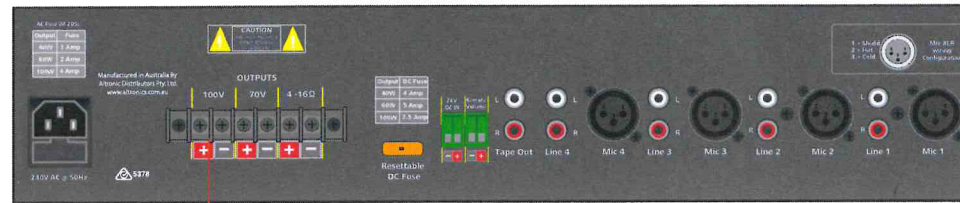


A 4903A 100V Line to Low Level Adaptor

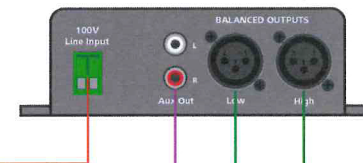

Important Note:
Only 1 output from the A 4903A should be connected at a time.

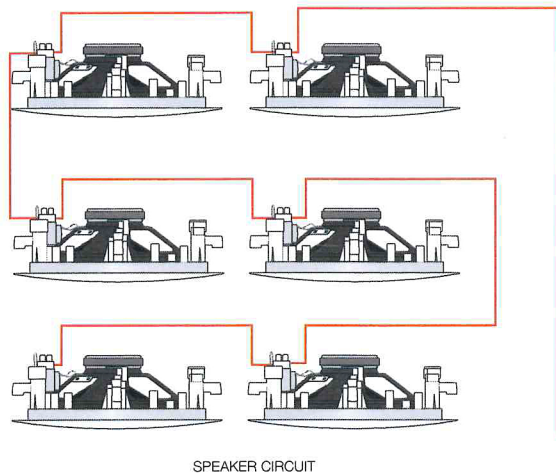

AMPLIFIER - ZONE 2

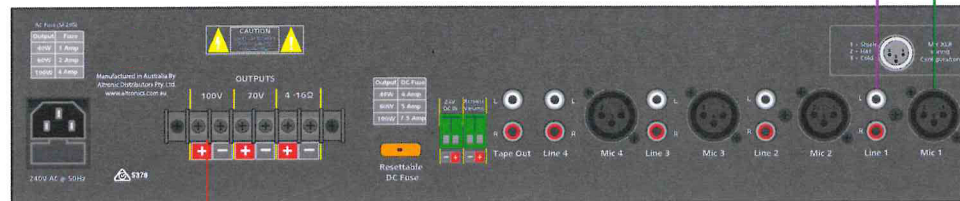

- Line Level RCA/3.5mm Stereo
- 100V Line Speaker Cable
- Balanced Line Cable

