



Operating Manual

A 4235A 30W Mixer Public Address Amplifier

A 4245A 60W Mixer Public Address Amplifier

A 4255A 100W Mixer Public Address Amplifier

OVERVIEW


These compact 1RU rack mount amplifiers are suitable for both stand alone PA system use, or as zone amplifiers in larger systems requiring local inputs. All models operate on 240V ac or 24V dc for battery backup operation. All models include a choice of six source options on 2 inputs. Input one consists of a 3-pin XLR which can be set for either balanced mic level (3mV) or balanced line level (2V), adjusted via a rear mounted trimpot. A dual RCA is also provided on input one with adjustable sensitivity of either 300mV or 1V. Input two consists of three sets of dual RCA sockets on the rear panel and a 3.5mm jack on the front panel. Auxiliary source inputs are selected via the front panel switch. Input one can be DIP switch selectable to VOX mute input two. Phantom power is also provided on input one XLR. Volume level controls are provided on the front panel for inputs one and two. The circuit includes protection features in case of output over voltage, over current and over temperature. All are self-resetting once the fault condition is removed. Visual indication via front panel LEDs display amplifier status at all times.

FEATURES

- Compact 1RU 19" rack mount design
- Balanced mic or line input
- VOX muting
- Phantom power
- Four auxiliary inputs
- 3.5mm Jack Input (Front Mounted)
- Overload limiting
- Over voltage limiting
- On demand fan cooling (60W and 100W versions only)
- Over temperature shut down protection
- Dual input connectors
- Variable input sensitivities
- 240V ac / 24V dc operation
- Australian designed & manufactured

Redback® A 4235A/45A/55A PA Mixer Amplifiers

REAR PANEL

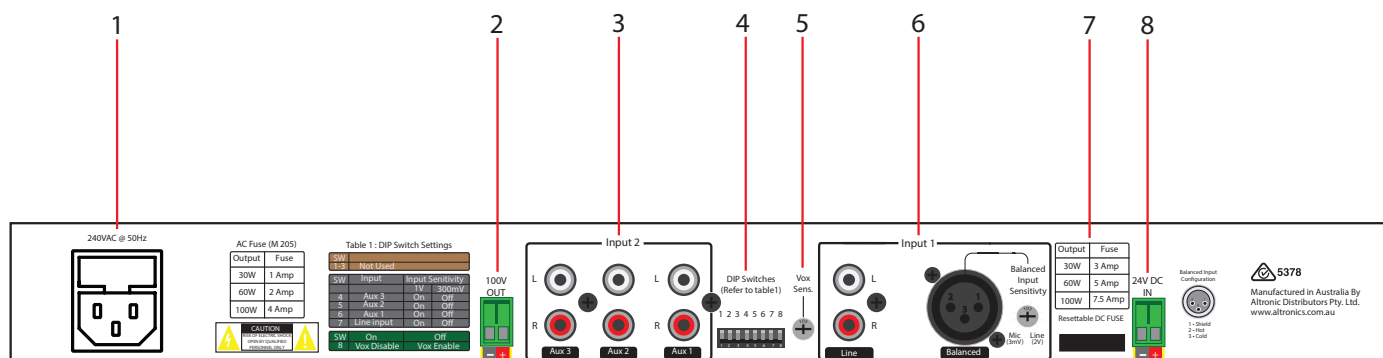

1 240V AC Input

Connect to a 220-240V AC @ 50Hz power source.

2 100V Output

Speakers fitted with a 100V line transformer may be connected. Always ensure that the total load of the speakers does not exceed the rated output of the amplifier ie 333Ω minimum at 100V for the A 4235A (30W), 166Ω minimum at 100V for the A 4245A (60W) and 100Ω minimum at 100V for the A 4255A (100W). Otherwise either the DC or mains fuse could blow or the fault led activate and the amp will shut down. Always be careful to avoid short circuits and connection to the wrong terminals. Refer to Fig 2 and Fig 3 for more details about the impedance of speakers and how to check the impedance.

3 Input 2

Input 2 consists of 3 sets of Dual RCA inputs and a front mounted 3.5mm jack. Each of these inputs has an adjustable input sensitivity of either 300mV or 1V set by DIP switches 4-6. The input is selected by the rotary switch on the front of the unit which has four positions. Three of the positions select the three RCA inputs and the fourth position selects the music input on the front of the unit. Volume is adjusted by the Input 2 volume pot on the front of the unit.

4 DIP Switch Settings

The A 4235A/45A/55A range of amplifiers have a set of options which are enabled via the DIP switches 1-8.

Switch 1-3

Not used

Switch 4-6

sets the input sensitivity for the Auxiliary RCA inputs on Input 2 to either 1V or 300mV.

Switch 7

sets the input sensitivity for the Dual RCA line input to either 1V or 300mV. Note: this only affects the line input.

Switch 8

Input 1 can be set to Vox Input 2 and is switched on via DIP 8.

5 Vox Sensitivity

When the VOX is set to "ON" via DIP 8, Input 2 is muted when audio at Input 1 is present. The sensitivity of the VOX circuit is adjusted via this trimpot.

6 Input 1

Input 1 can be used for mic or line input operation. The dual RCA line input has adjustable line input sensitivity of either 300mV or 1V (Set by DIP switch 7). The balanced XLR input has an adjustable input sensitivity from 3mV up to 2V. Phantom power is available on the balanced XLR input. Volume is adjusted via the Input 1 volume pot on the front of the unit.

7 Resettable DC Fuse

Used to protect the unit when powered from 24V DC. This fuse is resettable by pressing the red button.

8 24V DC Input

Battery Backup: Provision has been provided to run the amplifier from a suitably rated 24V battery system in the event of a mains failure. Using appropriately rated cable, connect the battery to the "24V DC In" terminals. Observe correct polarity when connecting.

SPEAKER CONNECTIONS

Speakers fitted with 100V line transformers may be connected to the output terminals on the rear of the amplifier. Always ensure the total load of the fitted speakers does not exceed the rated output of the amplifier (ie 30 watts for the A 4235A, 60 watts for the A 4245A and 100 watts for the A 4255A amplifier) otherwise damage may result. When fitting speakers with line transformers the impedance of the load cannot be measured using a standard multimeter. An impedance meter is required. Fig 2 lists the impedance at certain loads of speakers fitted with 70V and 100V line transformers. So for a total load of 60 watts using 100V line transformer fitted speakers, the impedance of the speaker load should be 166Ω.



About 70V & 100V Line Speaker Systems

Wiring speakers in parallel for 70/100V line: Where several speakers are to be used at one time, on one circuit, it becomes necessary to use speakers fitted with line-matching transformers. This is to overcome the effects of connecting speakers in parallel and cable losses. The amplifier generally has an output voltage of 100 volts (70 volts is typically used in North America, however operation is similar). In this configuration the total wattage load on the amplifier is derived from adding all the line transformer primary tap ratings together. For example, 70 one watt speakers will have a total speaker load of 70 watts. Or alternatively, it is conceivable to connect 100 one watt speakers to a 100 watt, 100 volt line amplifier.

Measuring 70/100V Line Speaker Impedance: To measure amplifier system load, you must use an impedance meter in order to measure the ac resistance of the connected speaker network. Impedance cannot be measured with a standard multimeter, as this measures the dc resistance.

Load	70V	100V
0.5W	9.4kΩ	20kΩ
0.66W	7.12kΩ	15kΩ
1W	4.7kΩ	10kΩ
1.25W	3.76kΩ	8kΩ
2W	2.35kΩ	5kΩ
2.5W	1.88kΩ	4kΩ
3W	1.56kΩ	3.3kΩ
5W	940Ω	2kΩ
7.5W	626Ω	1.3kΩ
10W	470Ω	1kΩ
15W	313Ω	666Ω
20W	235Ω	500Ω
30W	156Ω	333Ω
40W	117Ω	250Ω
60W	78Ω	166Ω
100W	47Ω	100Ω
125W	37Ω	80Ω
250W	19Ω	40Ω
500W	9.4Ω	20Ω

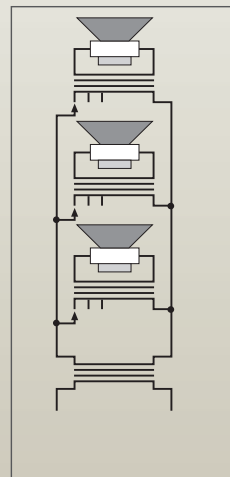


Fig 2. 100V Speaker Line Impedances



Fig 3. Redback Q 2007 Impedance Meter

TROUBLE SHOOTING

If the REDBACK amplifier fails to deliver the rated performance, check the following:

No Power, No Lights

Make sure amplifier power switch is on. Make sure mains power switch is on at the wall. Check the mains and DC fuse. Replace with only the correct type and rating. Over rated fuses will invalidate warranty.

Distorted Output

Check that the speaker type is correct for the output that you are using (ie. 100V line). Check for any short circuits on the speaker line and check the speaker line impedance. Note you must use an impedance meter for this such as Redback Q 2004 Impedance Meter.

Very Low Output Volume

Make sure that the input is the correct level (check for shorted connectors). Check for any short circuits on the speaker line. Check input DIP switches are set correctly.

Redback® A 4235A/45A/55A PA Mixer Amplifiers

Continually Blows Fuses

Make sure that the speaker line is not shorted. Check speaker types, ratings and if on correct output.

Amplifier Keeps Cutting In & Out

Make sure that there is adequate ventilation around the amplifier. Check the vent slots on the top and sides are not covered or blocked and the fan is functioning correctly. Check also speaker types, ratings and for any short circuits on the speaker line.

SPECIFICATIONS

POWER OUTPUTS

A 4235A:30 watts RMS
A 4245A:60 watts RMS
A 4255A:100 watts RMS
Distortion:.....< 0.5%, @ 1kHz

FREQUENCY RESPONSE

Mic input:.....50Hz - 12kHz, -3dB
Line input:50Hz - 15kHz, -3dB

SENSITIVITY

Mic input:3mV-2V balanced
Line input:.....300mV - 1V
Aux inputs: 300mV - 1V
3.5mm input: 600mV

SIGNAL TO NOISE RATIO

Mic input:> 75dB below rated output
Line input:.....> 81dB below rated output

OUTPUT CONNECTORS

Speakers:Screw terminals

INPUT CONNECTORS

Input1:3 pin XLR balanced or 2 x RCA
Input2:3 x RCA and 3.5mm Jack
24V DC power:Screw terminals
240V AC power: IEC power connector

WEIGHT

A 4235A: ≈4.6kg
A 4245A: ≈5.4kg
A 4255A: ≈6.3kg

DIMENSIONS: ≈ 483W x 210D x 44H

CURRENT DRAW:

A 4235A Min ≈ 140 mA
..... Max ≈ 2.4A
A 4245A Min ≈ 170 mA
..... Max ≈ 4.5A
A 4255A Min ≈ 190 mA
..... Max ≈ 6.8A

***Specifications subject to change without notice**

Other 1RU Amplifiers in this range

A 4230A 30W Public Address Amplifier

A 4240A 60W Public Address Amplifier

A 4250A 100W Public Address Amplifier



Distributed by Altronic Distributors Pty. Ltd.
Phone: 1300 780 999 Fax: 1300 790 999 Internet: www.altronics.com.au

User manual revision number: 1.5 02/11/2023