

D 2339A

USB to HDMI 1080p Converter

SPECIFICATION



INTERFACE INTRODUCTION

- ① Input: USB AM
- ② Output: 1×HDMI Female

Product size: 52.78x43.2x15.6(mm)

material: Aluminum alloy

This Adapter is used to connected USB-enabled devices (such as laptop, desktop) with a HDMI-enabled devices(such as monitor, projector, TV) for multi-monitor solution, extending working space with split-screen, mirroring display, etc.

This convertor have extend mode let your laptop for visibility of multiple tasks at the same time; Mirror mode gives your laptop to a large screen for a visual enjoyment. Suit for games entertainment, home theater, video conference, corporate training, etc.

PRODUCT SPEC

Support Mirror function


Support output resolution up to 1920*1080@60Hz

Working temperature: -20°C~55°C, humidity 5%~95%


INSTALLATION


The converter is build-in driver.

Step 1: Choose the No.2 procedure (RBDisplay_MultiDev_V1.0.0.1) to install

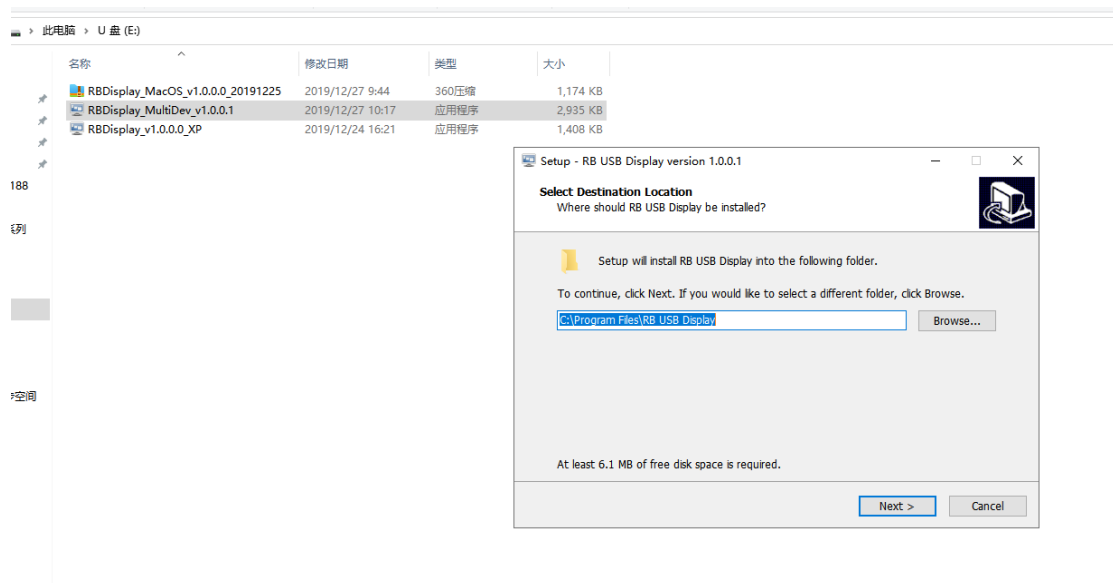

Step 2: Click“NEXT”then install

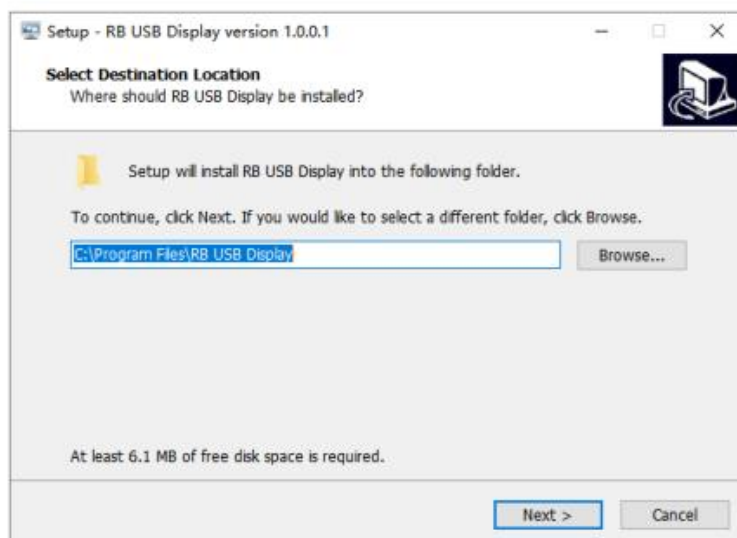

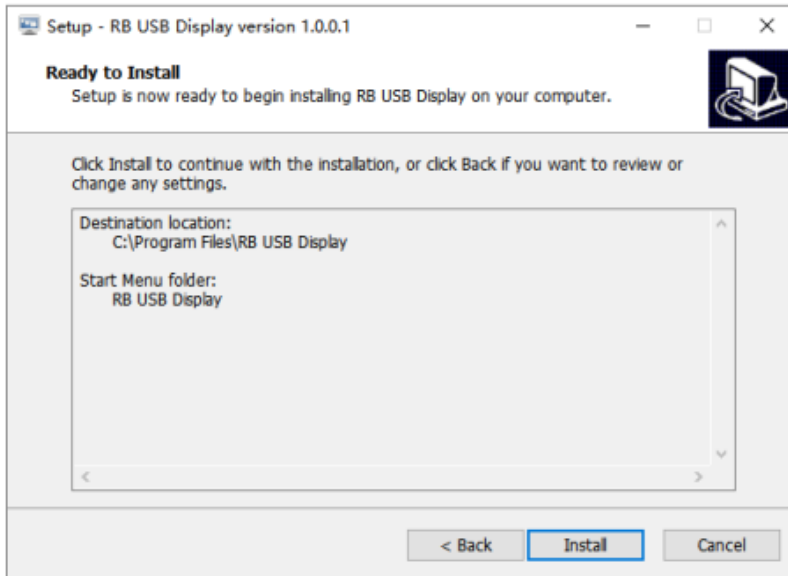

Step 3: restart your computer when you finish the installation



Step 4:

After installation, restart the computer, start up normally, confirm if the driver is installed properly, and the following icon appears to indicate that the installation is OK.

