


## Teranex Mini IP Video 12G

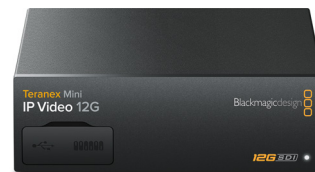

Now you can convert video to IP and route it over your existing ethernet network, or you can convert IP video back to SDI. Teranex Mini IP Video 12G uses standard Blackmagic Videohub software and hardware control panels to configure and switch IP video over ethernet as easily as SDI signals! You get 12G-SDI and the low latency broadcast quality TICO codec so you can route HD over the built in gigabit ethernet connection or Ultra HD over 10G ethernet with an optional 10G SFP!

**A\$935**

### Connections

#### SDI Video Inputs

1 x 10-bit HD-SDI, 6G-SDI and 12G-SDI

#### SDI Video Outputs

2 x 10-bit HD-SDI, 6G-SDI and 12G-SDI

#### Ethernet

Gigabit ethernet supports 3G-SDI up to 1080p60 using TICO encoding/decoding. Optional 10G optical data ethernet supporting Ultra HD up to 2160p60 using TICO encoding/decoding.

#### Multi Rate Support

Auto detection of HD-SDI, 6G-SDI or 12G-SDI.

#### Updates


USB 2.0 high speed (480Mb/s) interface or via Ethernet.

#### Configuration


Ethernet or USB 2.0 for firmware updates and IP address setting.

#### Reclocking

On all SDI outputs, auto switching between high definition, 6G-SDI or 12G-SDI video.

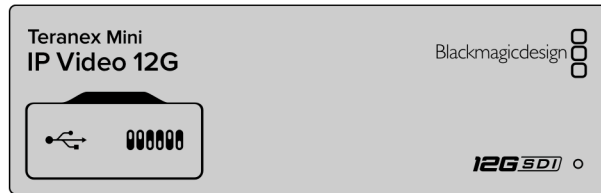

Mini Switches  
and USB

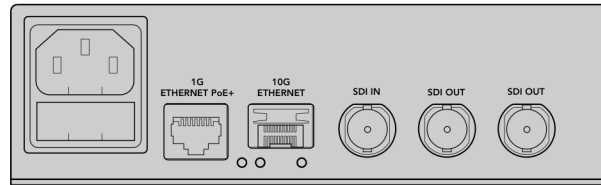

Power  
Connector

1G Ethernet  
PoE+

Optional  
10G Ethernet

12G-SDI  
In

12G-SDI  
Out

12G-SDI  
Out

## Standards

### HD Video Standards

720p50, 720p59.94, 720p60  
1080i50, 1080i59.94, 1080i60  
1080p23.98, 1080p24, 1080p25,  
1080p29.97, 1080p30, 1080p50,  
1080p59.94, 1080p60  
1080PsF23.98, 1080PsF24,  
1080PsF25, 1080PsF29.97, 1080PsF30

### 2K Video Standards

2Kp23.98 DCI, 2Kp24 DCI, 2Kp25 DCI  
2KPsF23.98 DCI, 2KPsF24 DCI,  
2KPsF25 DCI

### Ultra HD Video Standards

2160p23.98, 2160p24, 2160p25,  
2160p29.97, 2160p30, 2160p50,  
2160p59.94, 2160p60

### 4K Video Standards

4Kp23.98 DCI, 4Kp24 DCI, 4Kp25 DCI

### SDI Compliance

SMPTE 259M, SMPTE 292M,  
SMPTE 296M, SMPTE 310M,  
SMPTE 425M level A and B,  
SMPTE 2081-1, SMPTE 2081-10,  
SMPTE 2082-1, SMPTE 2082-10,  
ITU-R BT.656 and ITU-R BT.601

### SDI Video Rates

SDI video input is switchable between  
high definition, ultra high definition  
and 4K. SDI switches between 1.5 Gb/  
s HD-SDI, 3G-SDI, 6G-SDI and  
12G-SDI.

### SDI Video Sampling

4:2:2 plus 4:4:4 up to 4K DCI 30p

### SDI Audio Sampling

Television standard sample rate of 48  
kHz and 24-bit.

### SDI Color Precision

10-bit 4:2:2 and 4:4:4

### SDI Color Space

YUV or RGB for inputs, YUV for  
SDI outputs.

### SDI Auto Switching

Automatically selects between HD-  
SDI, 6G-SDI and 12G-SDI.

### SDI Metadata Support

Video payload identification ancillary  
data as per SMPTE 352M.

## Display

Optional Teranex Mini Smart Panel  
with 2.2 inch LCD for menu settings.

---

## Software

### Software Control

Blackmagic IP Video Setup and Videohub Router Control Software included on SD card for Windows and Mac.

### Internal Software Upgrade

Via included updater application.

---

## Operating Systems



Mac 10.15 Catalina,  
Mac 11.1 Big Sur or later.



Windows 10, 64-bit.

---

## Settings Control

### Control

Built in switches, setup software utility, or optional front mounted Teranex Mini Smart Panel with LCD, rotary knob and six settings buttons.

---

## Power Requirements

### Power Supply

IEC power cable required. 100 - 240V AC input.

### Power Fail Protection

Settings preserved and restored instantly at power on.

### Power over Ethernet

Can be powered via 48V DC using PoE+ (power over Ethernet).

### Power Consumption

16 Watts

---

## Physical Specifications



---

## Environmental Specifications

### Operating Temperature

0° to 40°C (32° to 104°F)

### Storage Temperature

-20° to 60°C (-4° to 140°F)

### Relative Humidity

0% to 90% non-condensing

---

## What's Included

Teranex Mini IP Video 12G

Welcome wallet with QR code for software download

---

## Warranty

3 year Limited Manufacturer's Warranty.

All items on this website are copyright Blackmagic Design Pty. Ltd. 2022, all rights reserved.  
All trademarks are property of their respective owners. MSRP includes GST and excludes shipping costs.  
This website uses remarketing services to advertise on third party websites to previous visitors to our site.  
You can opt out at any time by changing cookie settings. [Privacy Policy](#)

Blackmagic Design Authorized Reseller